

# **Enpirion® Power Datasheet**

EN5396QI 9A PowerSoC Synchronous DC-DC Buck Converter with Integrated Inductor

## **Description**

The EN5396QI is a Power Supply on a Chip (PwrSoC) DC-DC converter. It is specifically designed to meet the precise voltage and fast transient requirements of present and future high-performance, low-power processor, DSP, FPGA, ASIC, memory boards, and system level applications in a distributed power architecture. Advanced circuit techniques, ultra high switching frequency, and innovative, high-density, integrated circuit and proprietary inductor technology deliver high-quality, ultra compact, non-isolated DC-DC conversion. Operating this converter requires as few as five external components that include small value input and output ceramic capacitors and a soft-start capacitor.

The Altera Enpirion solution significantly helps in system design and productivity by offering greatly simplified board design, layout and manufacturing requirements. In addition, a reduction in the number of vendors required for the complete power solution helps to enable an overall system cost savings.


## **Applications**

- Point of load regulation for low-power processors, network processors, DSPs, FPGAs, and ASICs
- Notebook computers, servers, workstations
- Broadband, networking, LAN/WAN, optical
- Low voltage, distributed power architectures with 2.5V, 3.3V or 5V rails
- DSL, STB, DVR, DTV, Industrial PC
- Noise sensitive applications

## **Ordering Information**

Part Number	Temp Rating (°C)	Package	
EN5396QI	-40 to +85	58-pin QFN T&R	
EVB-EN5396QI	QFN Evaluation Board		

#### **Features**

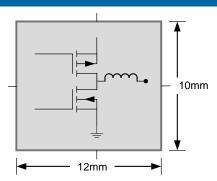

- Integrated Inductor Technology: Integrated Inductor, MOSFETS, Controller in a 10 x 12 x 1.85mm package
- Low External Part Count.
- Up to 30W continuous output power.
- Low output impedance optimized for ≤ 90 nm
- Master/slave configuration for paralleling.
- 5MHz operating frequency.
- High efficiency, up to 93%.
- Wide input voltage range of 2.375V to 5.5V.
- External resistor divider output voltage select.
- Output Enable pin and Power OK signal.
- Programmable soft-start time.
- Adjustable over-current protection.
- Thermal shutdown, short circuit, over-voltage and under-voltage protection.
- RoHS compliant, MSL level 3, 260C reflow.

## **Typical Application Circuit**

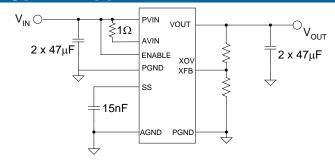


Figure 1. Simple Layout.

## Pin Configuration

Below is a top view diagram of the EN5396Q package.

NOTE: NC pins are not to be electrically connected to each other or to any external signal, ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.

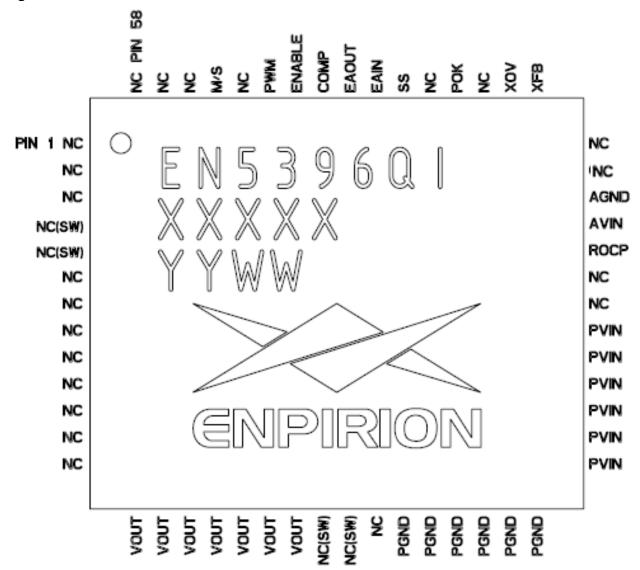


Figure 2. Pin Diagram, top view.

# Pin Descriptions

1-3 NC NO CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NO CONNECT — These pins are internally connected to the common drain output of the internal MOSFETS. NC(SW) pins are not to be electrically connected to any external signal, voltage, or ground, or voltage, However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.  NO CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  NC(S		NAME	
or ground, but must be soldered to PCB. This pin may be connected internally.  NC ONNECT — These pins are internally connected to the common drain output of the internal MOSFETS. NC(SW) pins are not to be electrically connected to any external signal, ground, or voltage, However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.  NC ONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 24-26.  NC(SW)  NC(SW)  NC(SW)  NC(SW)  NC(SW)  NC(SW)  NC CONNECT — These pins are internally connected to the common drain output of the many result in part malfunction or damage.  NC(SW)  NC(SW)  NC(SW)  NC CONNECT — These pins are internally connected to the common drain output of the many result in part malfunction or damage.  NC(SW)  NC(SW)  NC CONNECT — This pin should not be electrically connected to any external signal, yoltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  NC CONNECT — This pin should not be electrically connected to any external signal, yoltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  NC	PIN	NAME	FUNCTION
Action NC(SW)	1-3	NC	
A-5			
ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.  NC CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)  NC CONNECT – These pins are internally connected to the common drain output of the internal MOSFETs. NC(SW) pins are not to be electrically connected to any external signal, ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.  NC CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  24-29 PGND  ON CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC or ground, but must be soldered to PCB. This pin may be connected internally.  NC or ground, but must be soldered to PCB. This pin may be connected internally.  NC or ground, but must be soldered to PCB. This pin may be connected internally.  NC or ground, but must be soldered to PCB. This pin may be connected internally.  AND of the properties of the controller circuits.  NC or ground, but must be soldered to PCB. This pin may be connected internally.  AND Analog ground for the controller circuits. Connect this pin to the input power supply.  Analog ground for the controller circuits.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered t			
may result in part malfunction or damage.  NC OND CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Regulated converter output. Connect these pins to the load and place output capacitor from these pins to the load and place output capacitor from these pins the PGND pins 24-26.  NO CONNECT — These pins are internally connected to the common drain output of the internal MOSFERS. NC (SW) pins are not to be electrically connected to any external signal, ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.  NC CONNECT — This pin is should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  AVIN Analog voltage input for the controller circuits.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC CONNECT — This pin should not be electrically connected to any external sign	4-5	NC(SW)	
NC   NO CONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.    Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 24-26.   NC (SW)   Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 24-26.   NC (SW)   NC (SW)   Policy of the PGND pins 24-26.   NC (SW)   Regulated converter output. Connected to the common drain output of the internal MOSFETS. NC(SW) pins are not to be electrically connected to any external signal, or ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.   NC (SW)   Refer to layout guideline section.   AC (SW)   Output power ground. Refer to layout guideline section.   NC (SW)   Refer to layout guideline section.   NO (SW)   NO (SW)   Refer to layout guideline section.   NO (SW)   NO (SW)   Refer to layout guideline section.   NO (SW)   NO (SW)   Refer to layout guideline section.   NO (SW)   Refer to layout guideline section.   NO (SW)   NO (SW)   Refer to layout guideline section.   Refe			
or ground, but must be soldered to PCB. This pin may be connected internally.  NC(SW)			
Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 24-26.   NC(SW)	6-13	NC	
these pins the PGND pins 24-26.  NC(SW)  NC(SW	44.00	VOLIT	
NC(SW)   NC(SW)   NC(SW)   pins are internally connected to the common drain output of the internal MOSFETs. NC(SW) pins are not to be electrically connected to any external signal, ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.    NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.   PGND	14-20	VOUT	
Internal MOSFETS. NC(SW) pins are not to be electrically connected to any external signal, ground, or voltage. However, they must be soldered to the PCB. Failure to follow this guideline may result in part malfunction or damage.    23			
yound, or wittage, However, ruly must be soldered to rich PCB. Pallure to follow this guideline may result in part malfunction or damage.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  Analog voltage input for the controller circuits. Connect this pin to the input power supply.  Analog yound for the controller circuits. Connect this pin to the input power supply.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Power of K is an open drain transistor for power system state indication. POK is a logic high when YoUT is with -10% to +20% of YoUT nominal.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Power OK is an open drain transistor for power system state indication. POK is a logic high when YoUT is with -10% to +20% of YoUT nominal.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  No CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Power OK is an open drain transistor for power system state indication. POK is a logic high were volved	21 22	NC(SM)	
NC NO CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC NO CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC NO CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  AGND Analog voltage input for the controller circuits. Connect this pin to the input power supply.  AGND Analog ground for the controller circuits. Connect this pin to the input power supply.  AGND Analog ground for the controller circuits.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  ASP Feedback pin for external voltage divider network.  NC OCONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NC CONNECT — This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  COMP  EARLY  Optional Error Amplifier output. Allows for customization of the control loop.  Optional Error Amplifier input. Allows for customizati	21-22	140(344)	
24-29 PGND Output power ground. Refer to layout guideline section.  30-35 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND.  36-37 NC NC ONNECT – This pin should not be electrically connected internally.  38 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  39 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply.  40 AGND Analog ground for the controller circuits. Connect this pin to the input power supply.  41-42 NC NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  45 NC NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  47 NC OCONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Connected the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 PWM injust of the puffer leading to the error amplifier. Used for external modifications of the compensation network.  53 PWM injust of the puffer leading to the error amplifier. Used for ex			
24-29 PGND Output power ground. Refer to layout guideline section.  30-35 PVIN Input power ground. Refer to layout guideline section.  36-37 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  38 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  39 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply.  40 AGND Analog ground for the controller circuits.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  NC CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  47 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Control of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. Used for potional master/slave configuration. Whe	23	NC	
30-35 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. 36-37 NC NO CONNECT – This pin should not be electrically connected to any external signal, woltage, or ground, but must be soldered to PCB. This pin may be connected internally.  38 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  39 AVIN Analog woltage input for the controller circuits. Connect this pin to the input power supply.  40 AGND Analog ground for the controller circuits.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  47 NC NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier output. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. Used for external modifications of the compensation network.  53 PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "high", the PWM p			or ground, but must be soldered to PCB. This pin may be connected internally.
Sc-37   NC			
Power Ok is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.    Power Ok is an open drain transitor for point.	30-35	PVIN	
38 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point.  39 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply.  40 AGND Analog ground for the controller circuits.  41-42 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  45 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  47 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  53 PWM imput/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the master device. PWM pin (sa) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode	36-37	NC	
Solidar   Soli		_	or ground, but must be soldered to PCB. This pin may be connected internally.
AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply.  AGND Analog ground for the controller circuits.  NC ONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  XFB Feedback pin for external voltage divider network.  AVOV Over voltage programming feedback pin.  NC NO CONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NC NO CONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NO CONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  COMP  COMP  COMP  COMP  Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  PWM input fenable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC CONNECT - This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.	38	ROCP	
40 AGND Analog ground for the controller circuits.  41-42 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  45 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  47 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier input. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  53 PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  54 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  55 N/S NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  56 NO CONNECT – This pin should not be electrically	20	A \ / IN I	
41-42  NC  NO  NO  NO  NO  NO  NO  NO  NO  NO			
43 XFB Feedback pin for external voltage divider network.  44 XOV Over voltage programming feedback pin.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53)	40	AGND	
43 XFB Feedback pin for external voltage divider network. 44 XOV Over voltage programming feedback pin. 45 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally. 46 POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with +10% to +20% of VOUT nominal. 47 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally. 48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing. 49 EAIN Optional Error Amplifier input. Allows for customization of the control loop. 50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop. 51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network. 52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. 53 PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mod	41-42	NC	
44 XOV Over voltage programming feedback pin.  45 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  46 POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  47 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  48 SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  FWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the "master" device. PWM pin can drive up to 3 slave devices.  54 NC ONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any externa	43	XFR	
NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  POK POK Si san open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NC CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  PEAIN Optional Error Amplifier input. Allows for customization of the control loop.  COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  PNABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC OCONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin with the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or Should not be electrically connected to any external sig			ı
or ground, but must be soldered to PCB. This pin may be connected internally.  POWER OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NO CONNECT – This pin should not be electrically connected to any external signal, woltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  Detronal Error Amplifier input. Allows for customization of the control loop.  COMP  COMP  COMP  COMP  COMP  Detronal Error Amplifier output. Allows for customization of the control loop.  COMP  COMP  COMP  COMP  COMP  Detronal Error Amplifier output. Allows for customization of the control loop.  COMP  COMP  COMP  Detronal Error Amplifier output. Allows for customization of the control loop.  Dutput of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not			
POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output power places device to any external signal, voltage, "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Ma	45	NC	or ground, but must be soldered to PCB. This pin may be connected internally.
when VOUT is with -10% to +20% of VOUT nominal.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  EAIN Optional Error Amplifier input. Allows for customization of the control loop.  Dottopional Error Amplifier output. Allows for customization of the control loop.  COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Master" device.	40	DOK	
or ground, but must be soldered to PCB. This pin may be connected internally.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  FAIN Optional Error Amplifier input. Allows for customization of the control loop.  COMP Optional Error Amplifier output. Allows for customization of the control loop.  COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Master" device.	46	POK	
Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup timing.  Optional Error Amplifier input. Allows for customization of the control loop.  Optional Error Amplifier output. Allows for customization of the control loop.  Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "logic low disables the output."  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground. NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or master device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or master device.	47	NC	NO CONNECT - This pin should not be electrically connected to any external signal, voltage,
of this capacitor determines the startup timing.  49 EAIN Optional Error Amplifier input. Allows for customization of the control loop.  50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  53 PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM will output the gate-drive PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  54 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  55 Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal, voltage, "Master" device.	47	NC	or ground, but must be soldered to PCB. This pin may be connected internally.
49 EAIN Optional Error Amplifier input. Allows for customization of the control loop. 50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop. 51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  53 PWM PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "low", PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  54 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  55 Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  56 NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, volta	18	99	
50 EAOUT Optional Error Amplifier output. Allows for customization of the control loop.  51 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  53 PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  54 NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  55 M/S Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  56-58 NO CONNECT – This pin should not be electrically connected to any external signal, voltage, NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
51 COMP  Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network.  52 ENABLE  Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC  NC  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "Mode of the configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage, "No CONNECT – This pin should not be electrically connected to any external signal, voltage,			
compensation network.    ENABLE   Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.    PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.    NC	50	EAOUT	
ENABLE    Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output.    PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.    NC	51	COMP	
10gic low disables the output.  PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
PWM input/output. Used for optional master/slave configuration. When M/S pin is asserted "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,	52	ENABLE	
FWM  "low", PWM will output the gate-drive PWM waveform. When the M/S pin is asserted "high", the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NC  NC  NC  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
the PWM pin is configured as an input for PWM signal from the "master" device. PWM pin can drive up to 3 slave devices.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
can drive up to 3 slave devices.  NC NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,	53	PWM	
NO CONNECT – This pin should not be electrically connected to any external signal, voltage, or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
or ground, but must be soldered to PCB. This pin may be connected internally.  Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
Optional Master/Slave select pin. Asserting pin "low" places device in Master Mode for current sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,	54	NC	
sharing. PWM pin (53) will output PWM drive signal. Asserting pin "high" will place the device in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
in Slave Mode. PWM pin (53) will be configured to input (receive) PWM drive signal from "Master" device.  NO CONNECT – This pin should not be electrically connected to any external signal, voltage,		N4/0	
"Master" device.  Section 1. NO CONNECT – This pin should not be electrically connected to any external signal, voltage,	55	M/S	
NO CONNECT – This pin should not be electrically connected to any external signal, voltage,			
or ground, but must be soldered to PCB. This pin may be connected internally.	56.59	NC	
	50-56	INC	or ground, but must be soldered to PCB. This pin may be connected internally.

## **Block Diagram**

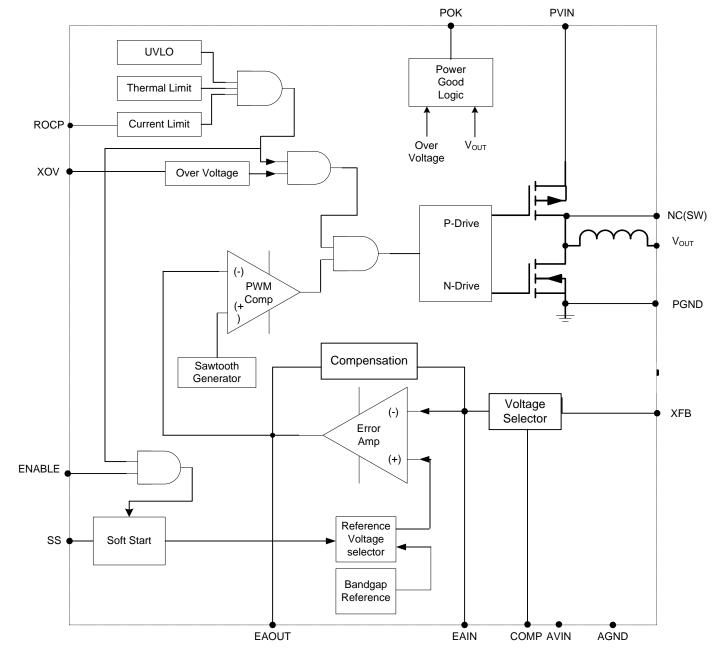


Figure 3. System block diagram.

## **Absolute Maximum Ratings**

CAUTION: Absolute Maximum ratings are stress ratings only. Functional operation beyond recommended operating conditions is not implied. Stress beyond absolute maximum ratings may cause permanent damage to the device. Exposure to absolute maximum rated conditions for extended periods may affect device reliability.

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Supply Voltage	$V_{IN}$	-0.5	7.0	V
Voltages on: ENABLE, V <sub>SENSE</sub> , XFB, XOV, M/S		-0.5	$V_{IN}$	V
Voltages on: EAIN, EAOUT, COMP		-0.5	2.5	
Voltages on: SS, PWM		-0.5	3.0	
Voltages on: POK		-0.5	$V_{IN} + 0.3$	
Storage Temperature Range	$T_{STG}$	-65	150	°C
Reflow Temp, 10 Sec, MSL3 JEDEC J-STD-020A			260	°C
ESD Rating (based on Human Body Model)		2000		V

## **Recommended Operating Conditions**

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Voltage Range	$V_{IN}$	2.375	5.5	V
Output Voltage Range (NOTE: 1)	$V_{OUT}$	0.75	V <sub>IN</sub> - V <sub>DROPOUT</sub>	V
Output Current (NOTE 2)	l <sub>out</sub>	0	9	Α
Operating Ambient Temperature	T <sub>A</sub>	-40	+85	°C
Operating Junction Temperature	$T_J$	-40	+125	°C

**Note 1**: V<sub>DROPOUT</sub> = I<sub>LOAD</sub> x Dropout Resistance

Note 2: Reference figures 5 and 6 for the Output Current Derating Curves.

#### Thermal Characteristics

PARAMETER	SYMBOL	TYP	UNITS
Thermal Resistance: Junction to Ambient (0 LFM) (Note 3)	$ heta_{JA}$	18	°C/W
Thermal Resistance: Junction to Case (0 LFM)	$\theta_{JC}$	1.5	°C/W
Thermal Overload Trip Point	$T_{J-TP}$	+150	°C
Thermal Overload Trip Point Hysteresis		20	°C

Note 3: Based on four layer board and proper thermal design in line with JEDEC EIJ/JESD 51 standards

#### **Electrical Characteristics**

NOTE: V<sub>IN</sub>=5.5V over operating temperature range unless otherwise noted.


Typical values are at  $T_A = 25$ °C.


PARAMETER	SYMBO	L TEST CONDITIONS	MIN	TYP	MAX	UNITS
V <sub>OUT</sub> Initial Accuracy	$\Delta V_{OUT\_INIT}$	$T_A = 25C$ , $2.375V \le V_{IN} \le 5.5V$ $I_{LOAD} = 1A$ ; $T_A = 25$ °C	-2		2	%
Overall V <sub>OUT</sub> Accuracy (Line, Load, and Temperature combined)	$\Delta V_{OUT\_ALL}$	$2.4V \le V_{IN} \le 5.5V$ - $40^{\circ}C \le T_{A} \le +85^{\circ}C$ $0A \le I_{LOAD} \le 9A$	-3%		+3%	
Transient Response Peak Deviation	$\Delta V_{OUT}$	$(I_{OUT} = 0\% \text{ to } 100\% \text{ or } 100\% \text{ to } 0\% \text{ or rated load})$ $V_{IN} = 5V, \ 1.2V \le V_{OUT} \le 3.3V$ $C_{OUT} = 2 \times 47 \ \mu\text{F}$		3		%
Under Voltage Lock out threshold	V <sub>UVLO</sub>	V <sub>IN</sub> Increasing V <sub>IN</sub> Decreasing		2.2 2.1		V
Switching Frequency	F <sub>SWITCH</sub>			5		MHz


PARAMETER	SYMBO	L TEST CONDITIONS	MIN	TYP	MAX	UNITS
Continuous Output Current	l <sub>out</sub>	$2.375V \le V_{IN} \le 5.5V$ $0.603 < V_{OUT} < V_{IN} - 0.5$ $T_A = -40^{\circ}C$ to $+60^{\circ}C$ NOTE: reference figures 5 and 6 for the output current derating curves	9			А
Current Limit Threshold	I <sub>OCP TH</sub>			11		Α
Shut-Down Supply Current	I <sub>S</sub>	ENABLE=0V		50		μΑ
Disable Threshold	V <sub>DISABLE</sub>	Max voltage to ensure the converter is disabled			0.8	V
Enable Threshold	$V_{\text{ENABLE}}$	$2.375V \le V_{IN} \le 5.5V$ $5.5V < V_{IN}$	1.8 2.0			V
Enable Pin Current	I <sub>EN</sub>	$V_{IN} = 5.5V$		50		μΑ
POK threshold High		Percentage of V <sub>OUT</sub> Nominal		120		%
POK threshold Low		Percentage of V <sub>OUT</sub> Nominal		90		%
POK Low Voltage		I <sub>POK</sub> = 4mA (Max Sink Current)			0.4	V
POK High Voltage					$V_{IN}$	V
Dropout Resistance				50		mΩ
Current Balance	$\Delta I_OUT$	With $2-4$ converters in parallel, the difference between any 2 parts. $\Delta V_{IN} < 50 \text{mV}$ ; $R_{TRACE} < 10 \text{m}\Omega$ .		+/-10		%

## **Typical Performance Characteristics**


Circuit of Figure 1,  $V_{IN} = 5$  V,  $V_{OUT} = 1.2$  V and  $T_A = 25$ °C, unless otherwise noted.

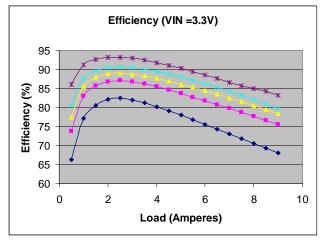

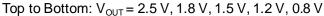


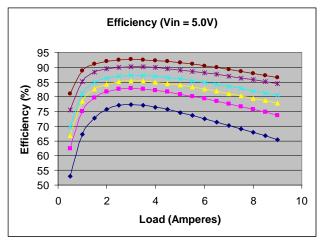


Top to Bottom:  $V_{OUT} = 3.3 \text{ V}, 2.5 \text{ V}, 1.8 \text{ V}, 1.5 \text{ V}, 1.2 \text{ V}, 0.8 \text{ V}$ 

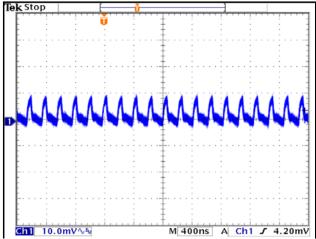


Ripple Voltage,  $5.5V_{IN}/1.2V_{OUT}$ ,  $I_{OUT}=9A$ ,  $C_{OUT}=5x22uF$ .

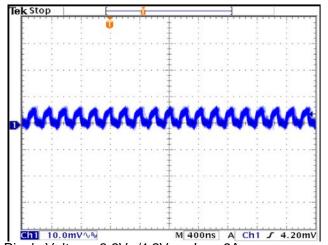


Ripple Voltage,  $3.3V_{IN}/1.2V_{OUT}$ ,  $I_{OUT}=9A$ ,  $C_{OUT}=5x22uF$ .

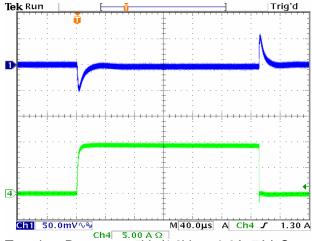



Transient Response:  $5V_{IN}/1.2V_{OUT}$ , 0-9A, 7A/uS.  $C_{OUT} = 5x22uF$ .

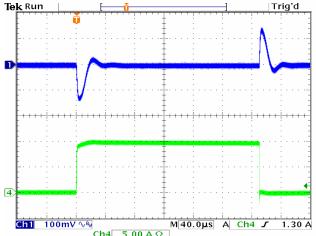

Transient Response:  $5V_{IN}/3.3V_{OUT}$ , 0-9A, 7A/uS.  $C_{OUT} = 5x22uF$ 

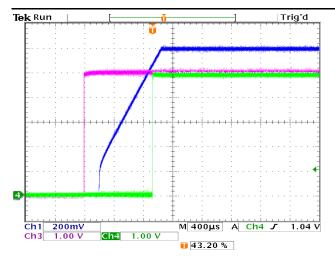

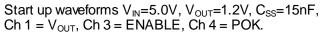

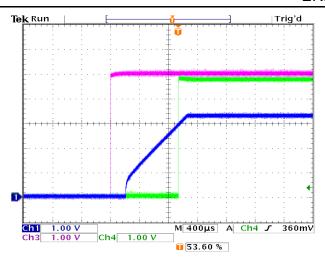

Start up waveforms  $V_{IN}$ =5.0V,  $V_{OUT}$ =3.3V,  $C_{SS}$ =15nF, Ch 1 =  $V_{OUT}$ , Ch 3 = ENABLE, Ch 4 = POK.

## **Functional Description**

EN5396Q1 The is synchronous, pin programmable power supply with integrated power MOSFET switches and integrated inductor. The nominal input voltage range is 2.375-5.5V. The output voltage is programmed using an external resistor divider network. The feedback control loop is a type III voltage-mode and the part uses a low-noise PWM topology. Up to 9A of output current can be drawn from this operating The converter. 5MHz frequency enables the use of small-size output capacitors.

The power supply has the following protection features:

- Programmable over-current protection (to protect the IC from excessive load current)
- Thermal shutdown with hysteresis.
- Over-voltage protection
- Under-voltage lockout circuit to disable the converter output when the input voltage is less than approximately 2.2V

Additional features include:

- Soft-start circuit, limiting the in-rush current when the converter is powered up.
- Power good circuit indicating whether the output voltage is within 90%-120% of the programmed voltage.

## **Programming Output Voltage and OVP**

The EN5396 output voltage is programmed using a simple resistor divider network. Figure 4 shows the resistor divider configuration.

The EN5396 output voltage and over voltage thresholds are determined by the voltages presented at the XFB and XOV pins respectively. These voltages are set by way of resistor dividers between  $V_{\text{OUT}}$  and AGND with the midpoint going to XFB and XOV.

It is recommended that Rb1 and Rb2 resistor values be  $\sim 2k\Omega$ . Use the following equation to set the resistor Ra1 for the desired output voltage:

$$Ra1 = \frac{(Vout - 0.75V) * Rb1}{0.75V}$$

If over-voltage protection is desired, use the following equation to set the resistor Ra2 for the desired OVP trip-point:

$$Ra2 = \frac{(OVPtrip - 0.90V) * Rb2}{0.90V}$$

By design, if both resistor dividers are the same, the OV trip-point will be 20% above the nominal output voltage.

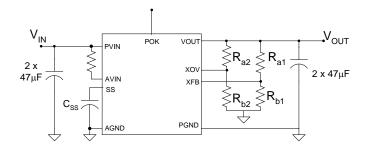


Figure 4. V<sub>OUT</sub> and OVP resistor divider networks.

**NOTE:** if no OVP divider is present, there will be no overvoltage protection and POK will remain "high" as long as  $V_{OUT}$  remains above 90% of the nominal  $V_{OUT}$  setting.

## **Power-Up/Down Sequencing**

During power-up, ENABLE should not be asserted before PVIN, and PVIN should not be asserted before AVIN. The PVIN should never be powered when AVIN is off. During power down, the AVIN should not be powered down before the PVIN. Tying PVIN and AVIN or all three pins (AVIN, PVIN, ENABLE) together during power up or power down meets these requirements.

## **Pre-Bias Start-up**

The EN5396QI does not support startup into a pre-biased condition. Be sure the output capacitors are not charged or the output of the EN5396QI is not pre-biased when the EN5396QI is first enabled.

#### **Input Capacitor Selection**

The EN5396QI requires approximately 100uF of input capacitance. Low ESR ceramic capacitors are required with X5R or X7R rated dielectric formulation. Y5V or equivalent dielectric formulations must not be used as these lose capacitance with frequency, temperature and bias voltage.

In some applications, lower value capacitors are needed in parallel with the larger, capacitors in order to provide high frequency decoupling.

#### Recommended input capacitors.

Description	MFG	P/N
47uF, 10V, X5R, 1210	Murata	GRM32ER61A476KE20L
(2 capacitorsneeded)	Taiyo Yuden	LMK325BJ476MM-T

#### **Output Capacitor Selection**

The EN5396QI has been optimized for use with approximately 100µF of output capacitance. Low ESR ceramic capacitors are required with X5R or X7R rated dielectric formulation. Y5V or equivalent dielectric formulations must not be used as these loose capacitance with frequency, temperature and bias voltage.

#### Recommended output capacitors.

Description	MFG	P/N
22uF, 6.3V, 10% X5R, 1206	Murata	GRM31CR60J226KE19L
(5 capacitors needed)	Taiyo Yuden	JMK316BJ226KL-T
47uF, 10V, 10% X5R, 1210 47uF, 6.3V, 10%	Murata	GRM32ER61A476KE20L
X5R, 1210 (2 capacitors needed)	AVX	12106D476KAT2

Output ripple voltage is determined by the aggregate output capacitor impedance. Output impedance, denoted as Z, is comprised of effective series resistance, ESR, and effective series inductance, ESL:

$$Z = ESR + ESL$$

Placing output capacitors in parallel reduces the impedance and will hence result in lower ripple voltage.

$$\frac{1}{Z_{Total}} = \frac{1}{Z_1} + \frac{1}{Z_2} + \dots + \frac{1}{Z_n}$$

Typical ripple versus capacitor arrangement is given below (5.5V<sub>IN</sub>/1.2V<sub>OUT</sub>):

Output Capacitor Configuration	Typical Output Ripple (mVp-p) (as measured on EN5396QI Evaluation Board)
2 x 47uF	20
5 x 22 uF	12

#### **Enable Operation**

The ENABLE pin provides a means to shut down the device, or enable normal operation. A logic low will disable the converter and cause it to shut down. A logic high will enable the converter into normal operation. When the ENABLE pin is asserted high, the device will undergo a normal soft start.

#### **Soft-Start Operation**

Soft start is a method to reduce in-rush current when the device is enabled. The output voltage is ramped up slowly upon start-up. The output rise time is controlled by choice of a soft-start capacitor, which is placed between the SS pin (pin 48) and the AGND pin (pin 40).

Rise Time:  $T_R = C_{ss}^* 80 \text{K}\Omega$ 

During start-up of the converter, the reference voltage to the error amplifier is gradually increased to its final level by an internal current source of typically 10uA. Typical soft-start rise time is 1mS to 3mS. Typical SS capacitor values are in the range of 15nF to 30 nF.

## **POK Operation**

The POK signal is an open drain signal from the converter indicating the output voltage is within the specified range. The POK signal will be a logic high when the output voltage is within 90% - 120% of the programmed output voltage. If the output voltage goes outside of this range, the POK signal will be a logic low until the output voltage has returned to within this range. In the

event of an over-voltage condition the POK signal will go low and will remain in this condition until the output voltage has dropped to 95% of the programmed output voltage before returning to the high state.

The internal POK FET is designed to tolerate up to 4mA. The pull-up resistor value should be chosen to limit the current from exceeding this value when POK is logic low.

#### **Over-Current Protection**

When an over current condition occurs,  $V_{\text{OUT}}$  is pulled low. This condition is maintained for a period of 1.2 ms and then a normal soft start cycle is initiated. If the over current condition still persists, this cycle will repeat.

The OCP trip point is nominally set to 150% of maximum rated load. It is possible to increase the OCP trip point to 200% of the maximum rated load by connecting a  $5k\Omega$  resistor between the ROCP pin (pin 38) and AGND (pin 39). This option is intended for startup into capacitive loads such as certain FPGAs and ASICs.

#### **Over-Voltage Protection**

When the output voltage exceeds 120% of the programmed output voltage, the PWM operation stops, the lower N-MOSFET is turned on and the POK signal goes low. When the output voltage drops below 95% of the programmed output voltage, normal PWM operation resumes and POK returns to its high state.

#### **Thermal Overload Protection**

Thermal shutdown will disable operation once the Junction temperature exceeds approximately 150°C. Once the junction temperature drops by approx 20°C, the converter will re-start with a normal soft-start.

#### Input Under-voltage Lock-out

Circuitry is provided to ensure that when the input voltage is below the specified voltage range, the converter will not start-up. Circuits for hysteresis, input de-glitch and output leading edge blanking are included to ensure high noise immunity and prevent false tripping.

#### Compensation

The EN5396 is internally compensated through the use of a type 3 compensation network and is optimized for use with about 50µF of output capacitance and will provide excellent loop bandwidth and transient performance for most applications. (See the section on Capacitor Selection for details on recommended capacitor types.) Voltage mode operation provides high noise immunity at light load.

In some cases modifications to the compensation may be required. The EN5396QI provides access to the internal compensation network to allow for customization. For more information, contact Altera Power Applications support.

#### **Parallel Device Operation**

In order to power a load that is higher than the rated 9A of the EN5396, from 2 to 4 devices can be placed in parallel for providing a single load with up to 24A of output current.

Paralleling more than 1 device is accomplished by selecting a master device and tying that M/S pin to AGND. All slave devices should have their M/S pin tied to AVIN. The PWM pin from the master device is connected to all slave device PWM pins. The PWM signal is a 5 MHz drive signal and must be routed appropriately. (See Figure 4.)

- All master and slave devices should have identical placement and values of input, output and soft-start capacitors.
- All master and slave devices should have their ENABLE pins tied together and should be operated simultaneously with a fast rising edge of 10 uSec or less, to ensure that devices start up at the same time. Startup imbalance could lead to OCP condition on first device to startup.
- 3. The maximum board trace resistance between any 2 devices VOUT pins should be less than  $10m\Omega$ .
- 4. The maximum difference of PVIN between any 2 devices should be less than 50mV.

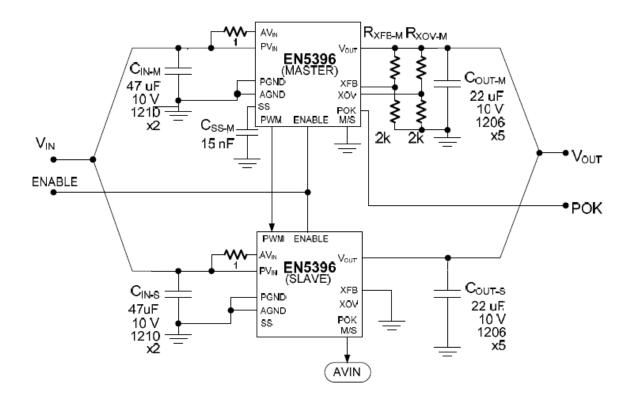


Figure 4. Paralleling of two devices.

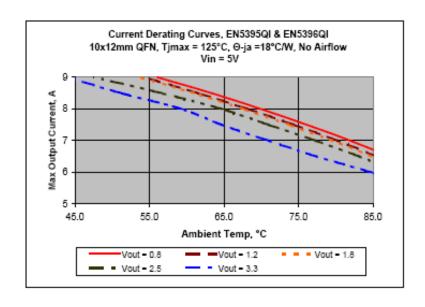


Figure 5. Output Current Derating Curve, V<sub>IN</sub> = 5.0V

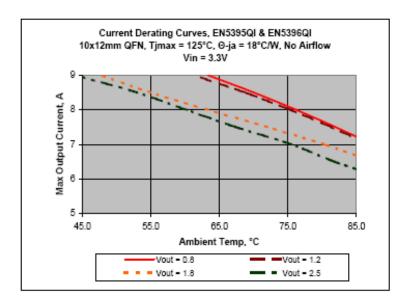


Figure 6 . Output Current Derating Curve,  $V_{\text{IN}} = 3.3 \text{V}$ 

## **Layout Recommendations**

Thermal considerations are important power supply design facts that cannot be avoided in the real world. Whenever there are power losses in a system, the heat that is generated by the power dissipation needs to be accounted for. The Altera Enpirion PowerSoC helps alleviate some of those concerns.

The Altera Enpirion EN5396QI DC-DC converter is packaged in an 10x12x1.85mm 58-pin QFN package. The QFN package is constructed with copper lead frames that have exposed thermal pads. The exposed thermal pad on the package should be soldered directly on to a copper ground pad on the printed circuit board (PCB) to act as a heat sink. The recommended maximum junction temperature for continuous operation is 125°C. Continuous operation above 125°C may reduce long-term reliability. The device has a thermal overload protection circuit designed to turn off the device at an approximate junction temperature value of 150°C.

The following example and calculations illustrate the thermal performance of the EN5396QI.

Example:

 $V_{IN} = 12V$ 

 $V_{OUT} = 3.3V$ 

 $I_{OUT} = 9A$ 

First calculate the output power.

$$P_{OUT} = 3.3 \text{V x } 9A = 29.7 \text{W}$$

Next, determine the input power based on the efficiency  $(\eta)$  shown in Figure 7.

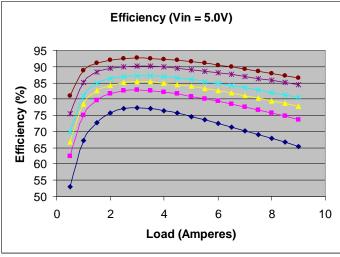


Figure 7: Efficiency vs. Output Current Top to Bottom:  $(V_{OUT} = 3.3 \text{ V}, 2.5 \text{ V}, 1.8 \text{ V}, 1.5 \text{ V}, 1.2 \text{ V}, 0.8 \text{ V})$ 

For  $V_{IN} = 12V$ ,  $V_{OUT} = 3.3V$  at 9A,  $\eta \approx 86.5\%$ 

$$\eta = P_{OUT} / P_{IN} = 86.5\% = 0.865$$

$$P_{IN} = P_{OUT} / \eta$$

$$P_{IN} \approx 13.2W / 0.865 \approx 34.34W$$

The power dissipation (P<sub>D</sub>) is the power loss in the system and can be calculated by subtracting the output power from the input power.

$$P_D = P_{IN} - P_{OUT}$$
  
  $\approx 34.34W - 29.7W \approx 4.63W$ 

With the power dissipation known, the temperature rise in the device may be estimated based on the theta JA value ( $\theta_{JA}$ ). The  $\theta_{JA}$  parameter estimates how much the temperature will rise in the device for every watt of power dissipation. The EN5396QI has a  $\theta_{JA}$  value of 18 °C/W without airflow.

Determine the change in temperature ( $\Delta T$ ) based on  $P_D$  and  $\theta_{JA}$ .

$$\Delta T = P_D \times \theta_{JA}$$

$$\Delta T \approx 4.63W \times 18^{\circ}C/W = 83.43^{\circ}C \approx 84^{\circ}C$$

The junction temperature  $(T_J)$  of the device is approximately the ambient temperature  $(T_A)$  plus the change in temperature. We assume the initial ambient temperature to be 25°C.

$$T_J = T_A + \Delta T$$

The maximum operating junction temperature  $(T_{JMAX})$  of the device is 125°C, so the device can operate at a higher ambient temperature. The maximum ambient temperature  $(T_{AMAX})$  allowed can be calculated.

$$T_{AMAX} = T_{JMAX} - P_D \times \theta_{JA}$$

$$\approx 125^{\circ}C - 84^{\circ}C \approx 41^{\circ}C$$

The maximum ambient temperature the device can reach is 41°C given the input and output conditions. Note that the efficiency will be slightly lower at higher temperatures and this calculation is an estimate.

## **Layout Recommendations**

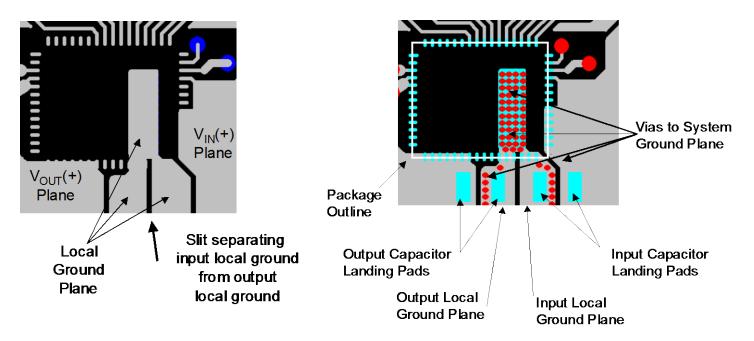


Figure 8. Layout of power and ground planes.

Figure 9. Use of vias connecting local and system ground.

Recommendation 1: Input and output capacitors should be placed as close to the EN5396QI package as possible to reduce EMI from input and output loop currents. This reduces the physical area of the Input and Output AC current loops.

**Recommendation 2**: Place a slit in the input/output capacitor ground plane just beyond the common connection point of the GND pins of the device as shown in Figure 8.

**Recommendation 3**: Multiple small (0.25mm) vias should be used to connect ground terminal of the Input capacitor and the output capacitor to the system ground plane as shown in Figure 9.

**Recommendation 4**: The large thermal pad underneath the component must be connected to the system ground plane through as many

vias as possible. The diameter of the vias should be less than 0.3mm. This provides the quiet, or analog ground for the converter and also provides the path for heat dissipation from the converter. A later section of this note makes a recommendation on the PCB footprint.

**Recommendation 5:** The system ground plane referred to in recommendations 3 and 4 should be the first layer immediately below the surface layer. This ground plane should be continuous and un-interrupted below the converter and the input and output capacitors that carry large AC currents.

**Recommendation 6**: As with any switch-mode DC/DC converter, do not run sensitive signal or control lines underneath the converter package.

## Design Considerations for Lead-Frame Based Modules

#### **Exposed Metal on Bottom of Package**

Lead frame offers many advantages in thermal performance, in reduced electrical lead resistance, , and in overall foot print. However, they do require some special considerations.

In the assembly process lead frame construction requires that, for mechanical support, some of the lead-frame cantilevers be exposed at the point where wire-bond or internal passives are attached. This results in several small pads being exposed on the bottom of the package.

Only the large thermal pad and the perimeter pads are to be mechanically or electrically connected to the PC board. The PCB top layer under the EN5396QI should be clear of any metal except for the large thermal pad. The "grayed-out" area in Figure 10 represents the area that should be clear of any metal (traces, vias, or planes), on the top layer of the PCB.

Figure 10 demonstrates the recommended PCB footprint for the EN5396QI. Figure 11 shows the shape and location of the exposed metal pads as well as the mechanical dimension of the large thermal pad and the pins.

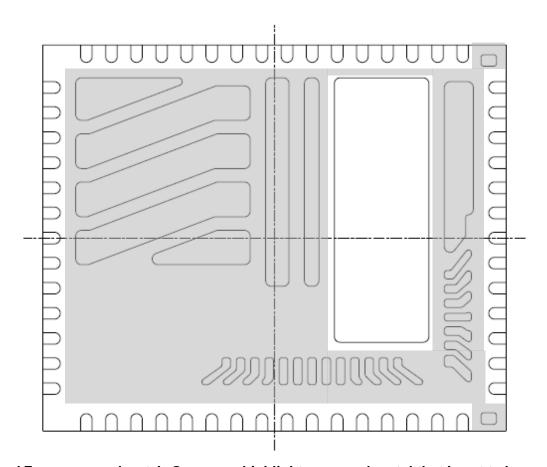


Figure 10. Lead-Frame exposed metal. Grey area highlights exposed metal that is not to be mechanically or electrically connected to the PCB.

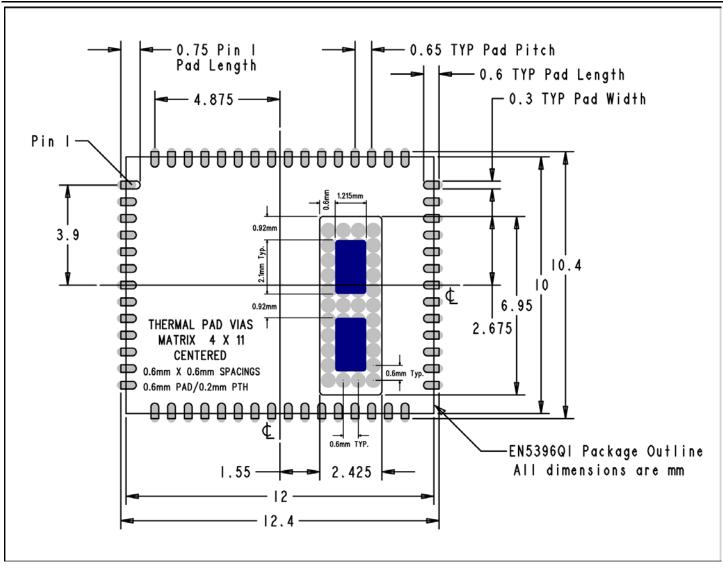


Figure 11: EN5396QI PCB Footprint (Top View)

The solder stencil aperture for the thermal pad is shown in blue and is based on Enpirion power product manufacturing specifications.

# Package Dimensions

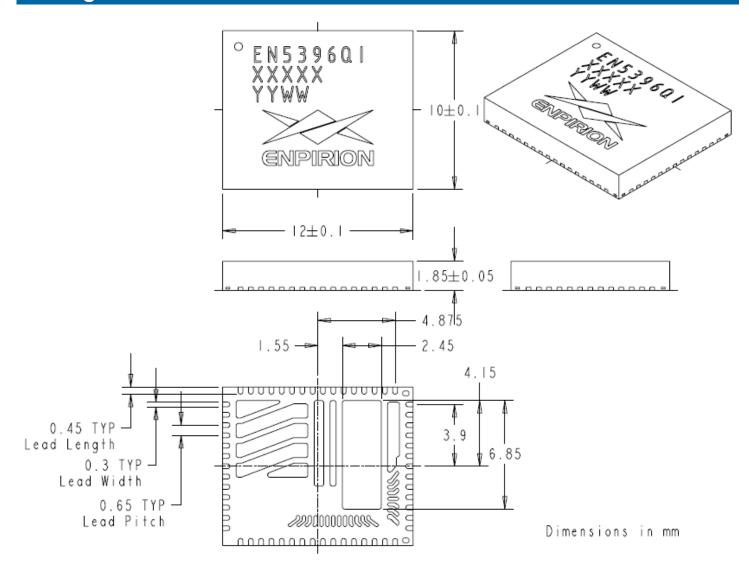


Figure 12. Package dimensions.

### **Contact Information**

Altera Corporation 101 Innovation Drive San Jose, CA 95134 Phone: 408-544-7000 www.altera.com

© 2013 Altera Corporation—Confidential. All rights reserved. ALTERA, ARRIA, CYCLONE, ENPIRION, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Altera:

EN5396QI EVB-EN5396QI